



Please read this document carefully before using this product. The guarantee will be invalidated if the device is damaged by not following instructions detailed in the manual. The company shall not be responsible for any damage or losses however caused, which may be experienced as a result of the installation or use of this product.

ENDA EFSC SERIES SINGLE PHASE FAN SPEED CONTROL

Thank you for choosing **ENDA EFSC** Fan Speed Controller

- ▶ 4-20mA or 0-10V Input type.
- ▶ 8A AC Load current.
- ▶ Zero-Cross Control.
- ▶ CE marked according to European standards.



The device should not be powered during installation. Installation and electrical connections should be carried out by technical personnel in accordance with the instructions in the user manual. It is intended for open PCB use and should be kept away from water



Product code	Nominal Current	Input signal
EFSC-V	8 A	0...10V DC
EFSC-I	8 A	4-20 mA DC


TECHNICAL SPECIFICATIONS

Supply Voltage	230V AC +%-10-%20, 50/60Hz
Rated Current (at 40°C)	8A
Current Value at 40°C and 50°C	8A
Fuse Type and Rating	EFSC : 5x20mm 10A Time Delay
Power Consumption for 0-10V DC / 4-20mA DC	1.5 VA
Connection	2.5mm ² terminal block
EMC	EN 61326-1: 2021

CONTROL

Signal Type	0-10V DC, 4-20mA DC
Input Impedance	180kΩ for 0-10V DC , 100Ω for 4-20mA DC
Min. Input Signal Amplitude	5V
Max. Input Signal Amplitude	9.3V
Operating Environment Temperature	-10....50°C
Storage Enviroment Temperature	-20....85°C
Operating and Storage Environment Humidity	10...90 % (non-condensing)

DIMENSIONS

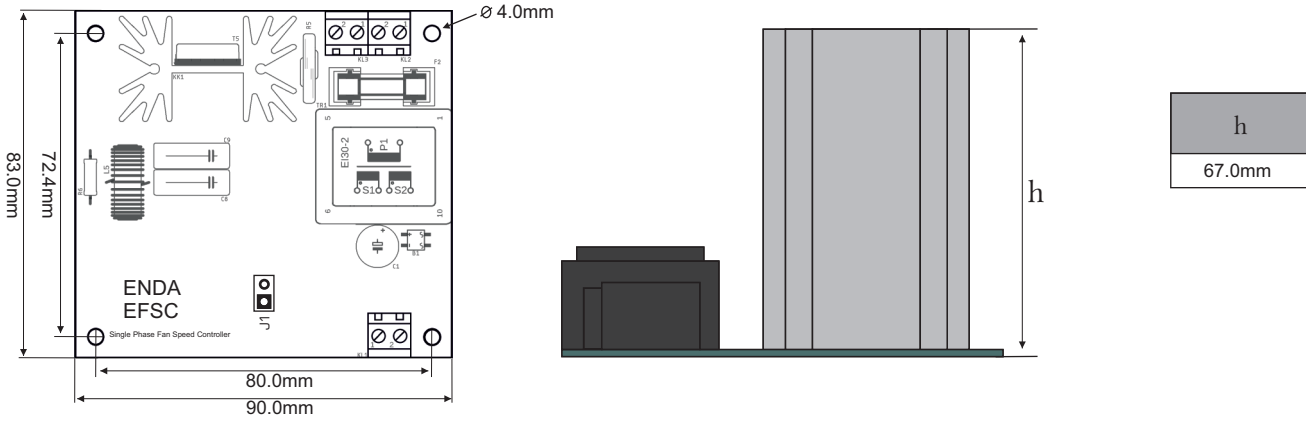

CONNECTION




The input type of the device should be checked before providing power to the device.

Device Calibration:

When powering the device, provide 10V or 20mA to the device input based on the input type, and short-circuit the calibration pin for 1 second. If the calibration value is correct, the device will output 100% in 1-second intervals for 10 seconds. Once the time is completed, the device returns to normal operating mode.

If the calibration value is incorrect, the device output will be at 100% in 250ms intervals. Provide the correct calibration value to the input, and the device will continue to output in 250ms intervals until the calibration pins are short-circuited for 1 second, at which point the device will return to normal operation."

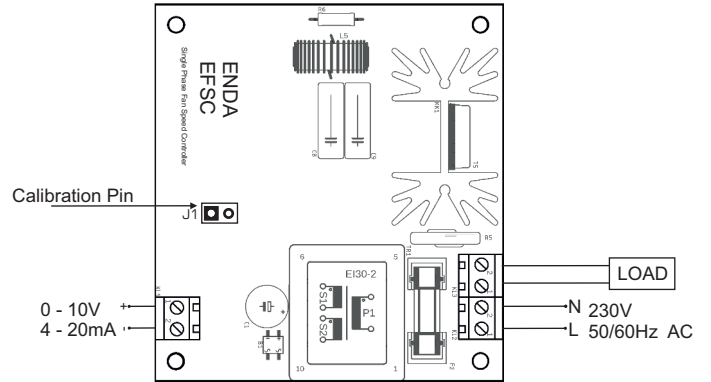

INPUT - OUTPUT CHARACTERISTICS

