



Dimensions

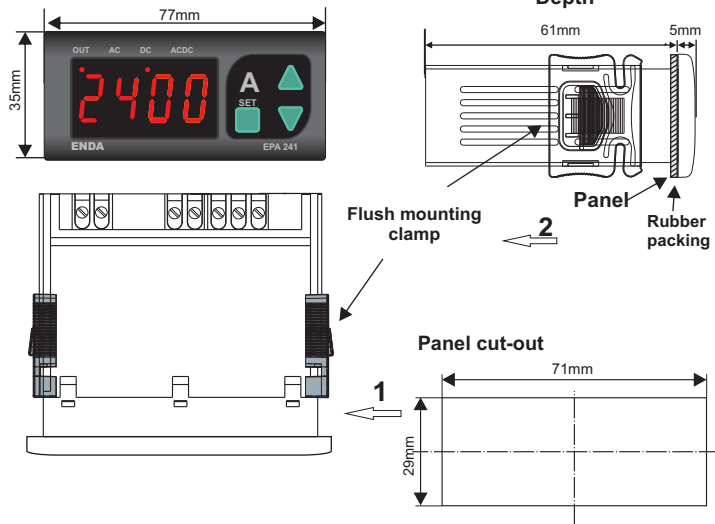


To remove the device from panel:
 - While pushing the the flush-mounting clamp in direction 1, pull out it in direction 2.

- Note :**
- 1) Panel thickness should be maximum 7mm.
 - 2) If there is no 60mm free space at the back side of the device, it would be difficult to remove it from the panel.

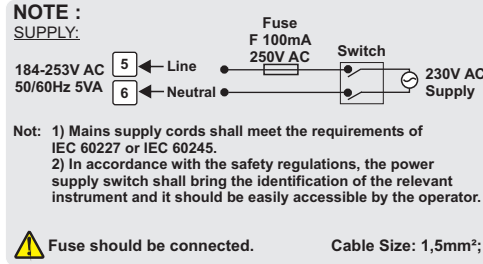


- Equipment is protected throughout by DOUBLE INSULATION
- Holding screw 0.4-0.5Nm.

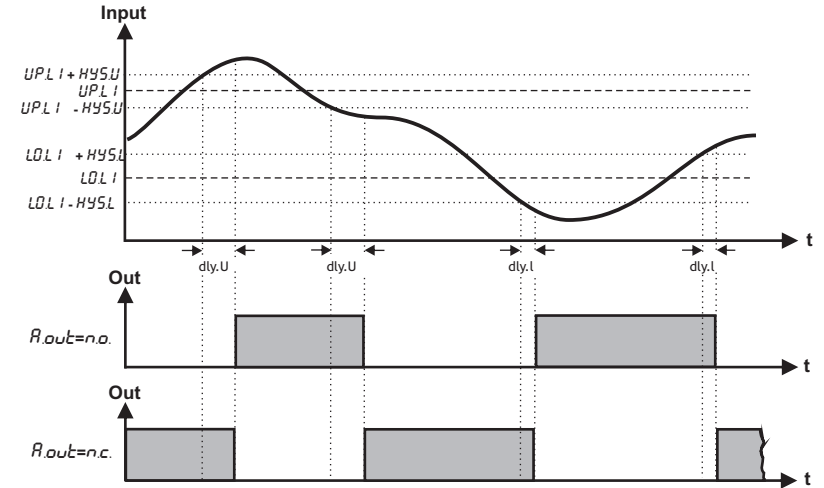

Connection Diagram



ENDA EPA241 is intended for installation in control panels. Make sure that the device is used only for intended purpose. The electrical connections must be carried out by a qualified staff and must be according to the relevant locally applicable regulations. During an installation, all of the cables that are connected to the device must be free of electrical power. The device must be protected against inadmissible humidity, vibrations, severe soiling. Make sure that the operation temperature is not exceeded. The cables should not be close to the power cables or components.

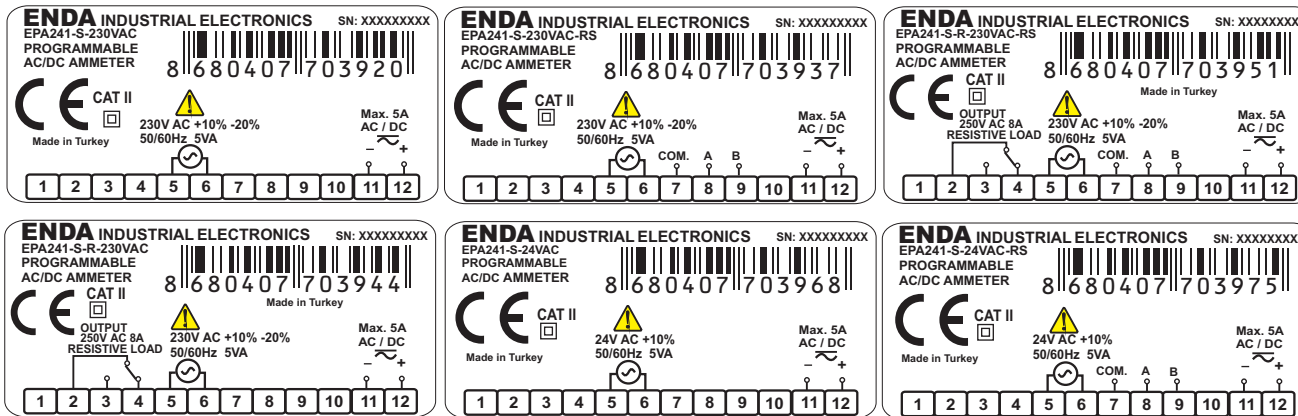


	ac	dc	Ac.dc (rms)
	$A \frac{1}{\sqrt{2}}$	0.000	$A \frac{1}{\sqrt{2}}$
	0.308 A	$A \frac{2}{\pi}$	$A \frac{1}{\sqrt{2}}$
	0.386 A	$A \frac{1}{\pi}$	$A \frac{1}{2}$
	A	0.000	A
	$A \frac{1}{2}$	$A \frac{1}{2}$	$A \frac{1}{\sqrt{2}}$
	$A \sqrt{\frac{d}{T} - \frac{d^2}{T^2}}$	$A \frac{d}{T}$	$A \sqrt{\frac{d}{T}}$
	$A \frac{1}{\sqrt{3}}$	0.000	$A \frac{1}{\sqrt{3}}$

EPA241 PROGRAMMING DIAGRAM




- Increment key** Used for increasing the setpoint value and changing parameters. When held down for a few seconds, configured numeric value increases faster.
- Decrement key** Used for decreasing the setpoint value and changing parameter. When held down for a few seconds, configured numeric value decreases faster.
- Programming key** Used for displaying and configuring the selected parameter value.


ADJUSTING THE ALARM VALUE

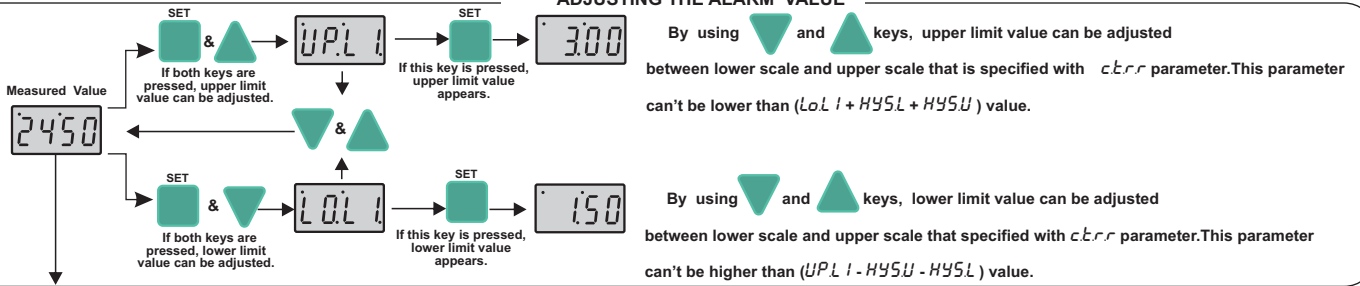

If both & keys are pressed and held for 3 seconds, programming mode is entered. If & keys are pressed while parameter names are displayed, then it returns to measured value mode.

PROGRAMMING MODE

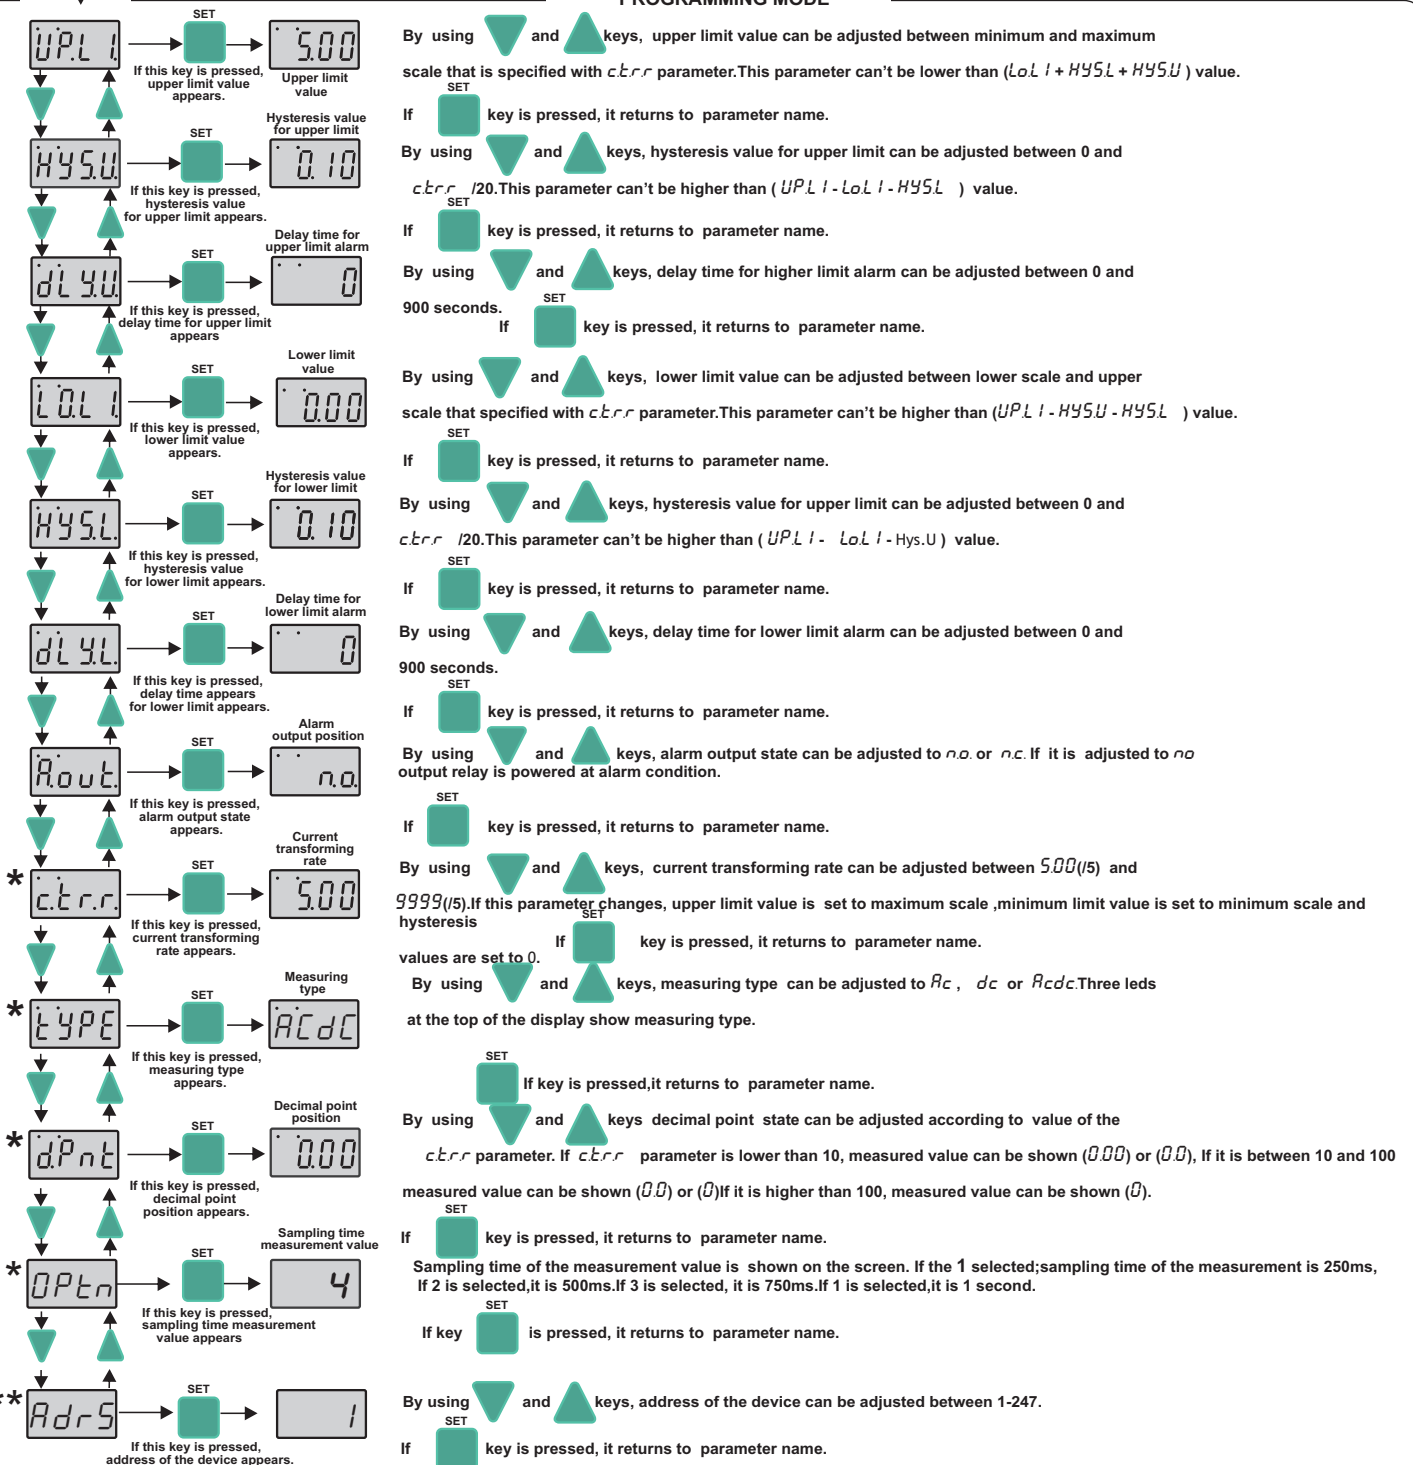



By using and keys, baudrate value of the device can be adjusted to OFF,1200,2400,4800,9600,19200.

If key is pressed, it returns to parameter name.

(*) There are only *ctrr*, *type*, *dPnt* and *oPln* parameters in the devices those have no relay.

(**) The *Adr5* and *bAud* parameters are only in the devices those have modbus.

If any key is pressed in 25 seconds or the device is powered down and powered up, then it returns to operation mode.

NOTE: If key is held down while the device is powered up, the *dPrr* message will appear and the factory settings will be restored.

ERROR MESSAGES



Means, measured current value is higher than maximum scale.



Means, measured current value is lower than minimum scale.

ENDA EPA241 DIGITAL AMPERMETER MODBUS PROTOCOL ADDRESS MAP

1.1 HOLDING REGISTERS

Holding Register Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission	Status Value
Decimal	Hex					
0000d	0x0000	word	The upper limit of the setpoint	<i>uPLl</i>	Readable/Writable	5.0
0001d	0x0001	word	The upper limit of the hysteresis value	<i>HYSU</i>	Readable/Writable	0.10
0002d	0x0002	word	Delay time for the upper limit alarm	<i>dLYU</i>	Readable/Writable	0
0003d	0x0003	word	The lower limit of the setpoint	<i>LoLl</i>	Readable/Writable	0
0004d	0x0004	word	The lower limit of the hysteresis value	<i>HYSL</i>	Readable/Writable	0.10
0005d	0x0005	word	Delay time for the lower limit alarm	<i>dLYL</i>	Readable/Writable	0
0006d	0x0006	word	Current replacement rate	<i>ctrr</i>	Readable/Writable	5
0007d	0x0007	word	Measurement method (0=AC, 1=DC, 2=ACDC)	<i>TYPE</i>	Readable/Writable	ACDC
0008d	0x0008	word	Decimal point. (0=X.XX, 1=X.X, 2=X)	<i>dPnt</i>	Readable/Writable	X.XX
0009d	0x0009	word	Sampling time of the measurement value. If 1 is selected, it is 250ms. If 2 is selected, it is 500ms. If 3 is selected, it is 750ms. If 4 is selected, it is 1 second.	<i>oPln</i>	Readable/Writable	4
0010d	0x000A	word	Device address for RS485 network connection. Adjustable between 1-247.	<i>Adr5</i>	Readable/Writable	1
0011d	0x000B	word	Baudrate (0=Off; 1=1200; 2=2400; 3=4800; 4=9600; 5=19200)	<i>bAud</i>	Readable/Writable	off

*Holding Register Parameter Table (No Relay Models)

0000d	0x0000	word	Current replacement rate	<i>ctrr</i>	Readable/Writable	5
0001d	0x0001	word	Measurement method (0=AC, 1=DC, 2=ACDC)	<i>TYPE</i>	Readable/Writable	ACDC
0002d	0x0002	word	Decimal point. (0=X.XX, 1=X.X, 2=X)	<i>dPnt</i>	Readable/Writable	X.XX
0003d	0x0003	word	Sampling time of the measurement value	<i>oPln</i>	Readable/Writable	4
0004d	0x0004	word	Device address for RS485 network connection. Adjustable between 1-247.	<i>Adr5</i>	Readable/Writable	1
0005d	0x0005	word	Baudrate (0=Off; 1=1200; 2=2400; 3=4800; 4=9600; 5=19200)	<i>bAud</i>	Readable/Writable	9600

1.2 INPUT REGISTERS

Input Register Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission
Decimal	Hex				
0000d	0x0000	word	Measured current value	--	Only Readable

1.3 DISCRETE INPUTS

Discrete Input Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission
Decimal	Hex				
00d	0x00	Bit	Relay output state (0=OFF; 1=ON)	--	Only Readable

1.4 COILS

Coil Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission	Status Value
Decimal	Hex					
00d	0x00	Bit	Alarm output state (0=no; 1=nc)	<i>RoUt</i>	Readable/Writable	

*Coil and Discrete input parameters are not available in the devices those have no relay